
BRIGHTECH

The Sky Floor Lamp

ASSEMBLY

1. Locate the lowermost pole section of the three connected poles (Part C); it is the pole that does not have the power button on it.
2. Screw this pole piece into the base (Part D).
3. Screw together the rest of the pieces of Part C, taking care to screw the poles in lined up straight, to protect the threading.
4. Feed the single pole (Part B) through the electrical cord on the lamp head (Part A).
5. Plug the cord into the upper part of Part C (the part with the power button), taking care to keep the poles properly aligned. Then screw together poles B & C.
6. Plug the power adapter cord (Part E) into the electrical cord that protrudes from the lowermost section of Part C.
7. Plug the cord into a 110v outlet. Review reverse side of this page for important warnings and safety information prior to use.

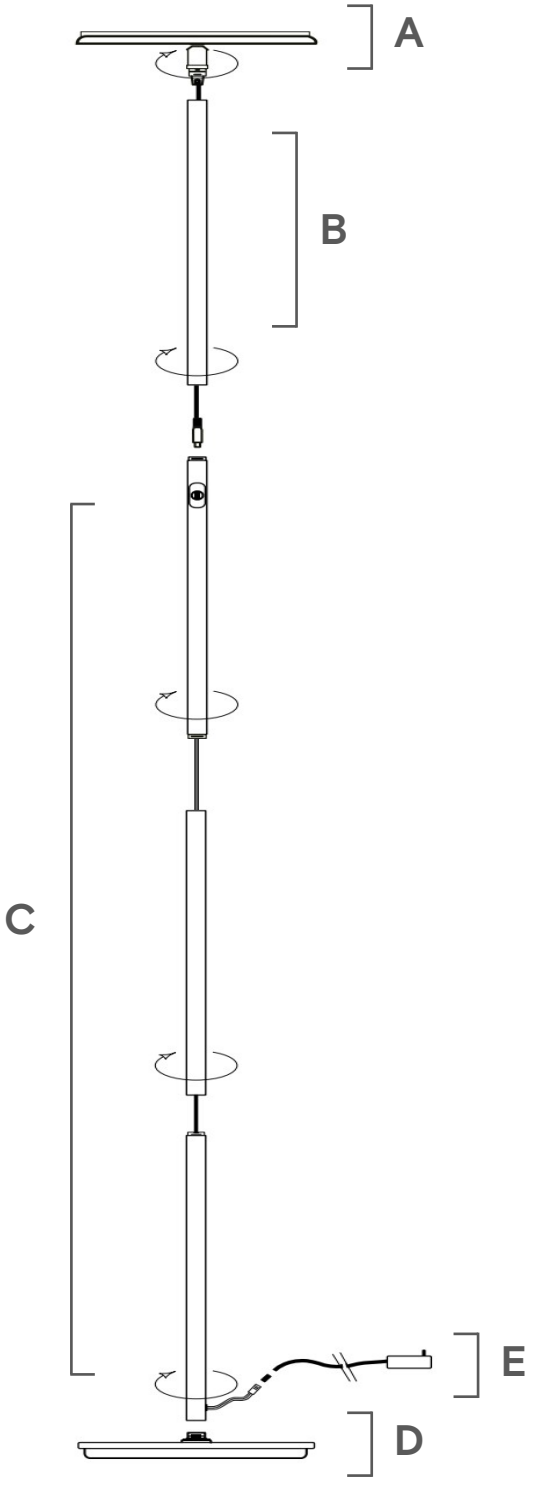

OPERATION & USE

POWER & DIMMING: The touch-sensor On/Off switch is located directly on the pole of the lamp. Simply tap lightly to turn on. To dim the lamp or to turn it off, tap the power button again. The lamp will first cycle through two dimmer brightness levels, and on the third tap, it will shut off.

USING WITH A WALL SWITCH: To use the Sky with a wall switch, simply plug it into an outlet that is built to be powered by the wall switch. The lamp will be able to be turned on and off via the switch, but the dimming needs to be controlled via the power button on the body of the lamp.

SAFETY & WARNINGS

This product is intended for 110v voltage only. Use with a higher voltage is likely to cause damage.

Do not bring this product or any of its components in contact with any water or extreme heat.

Keep between 23 degrees F - 104 degrees F, and below a humidity of 95%.

Do not use this product outside of its intended and advertised use. Do not tamper with internal parts or wiring.

Brightech is not responsible for modifications to this product or any of its electrical components, or for use with externally purchased parts not manufactured to come with this product.

FURTHER RESOURCES | Diagnosis

Thanks to our great track-record with these lights, reported problems have been few and far in-between. But we know, sometimes things can happen. If your product is experiencing any abnormalities, please see below for some more insight as to what may be happening & if there's anything you can do to trouble-shoot.

Note: Never make any temporary or permanent alterations to any parts or components of this product.

Physical or Cosmetic Damage: If the damaged portions of the product are among the separate pieces listed on the opposite side of this guide (see: Assembly), these pieces might be able to be replaced. Separate parts are Parts A-E.

Replacing the Lights or Wiring: The LEDs and wiring are wired through the body of the lamp for maximum durability and are non-replaceable at this time. However, the head might be able to be replaced, dependent on availability.

Light Flashing or Strobing: A malfunction of this sort may suggest a problem with the power adapter cord, necessitating a replacement of this cord.

Lights Dim: If the LEDs have dimmed, or the lamp has failed after first not performing at max brightness, this may suggest a failure of the actual LED component, necessitating a re-placement of the head.

SPECIFICATIONS

Wattage | 30 watts
Color Temperature | 3000 kelvin
Brightness | 1660 lumens
Adapter | Input AC100-240V | Output DC24V/1.6A

Need More Help?

Find us on the web
www.brightech.com

Connect with us
@wearebrightech

For questions or support
www.brightech.com/contact